



For your bench. At your side.

Digital Wax Injector


Installation & Operation

The Hand Pump is packed separately to prevent damage during shipping. You must install the hand pump onto the wax injector cover prior to use. The hand pump screws directly into the only available mounting hole on the cover.

The Digital Controller is set at our factory to 155 degrees Fahrenheit.

Once you plug in your unit and turn on the on/off switch, the heating lamp will turn on and the wax pot will begin heating. It will cycle on and off after it reaches the set temperature.

If you want to change the set temp do the following:

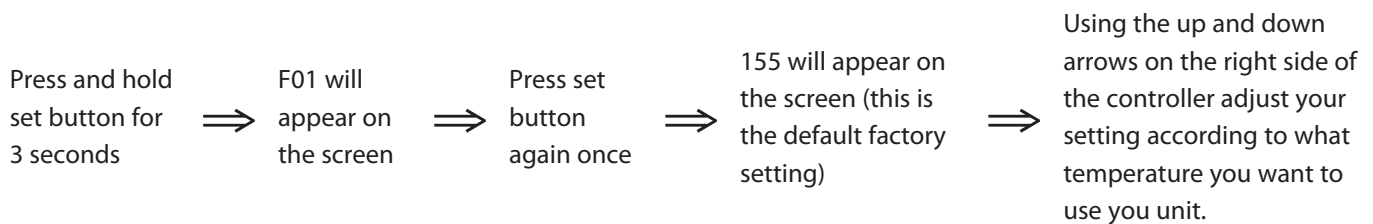

Once you enter your desired temperature setting you are done. Do not touch any other button. The controller will begin operating with the new set point in 5 seconds.